

Brand: **EnviLamp** • Type series: **DarkSky**

Typ: SLSG1 AMBER 40W/1900K C26 • 120 lm/W • Ra50

Typ: SLSG2 AMBER 70W/1900K C26 • 120 lm/W • Ra50

Typ: SLSG1 40W/830 r26 • 130 lm/W • Ra80

Typ: SLSG2 90W/830 r26 • 130 lm/W • Ra80

Typ: SLSG2 70W/830 r26 • 130 lm/W • Ra80

Typ: SLSG2 70W/830+DS r26 • 130 lm/W • Ra80

Typ: SLSG1 40W/830 r26b • 130 lm/W • Ra80

Typ: SLSG2 60W/519/830 • 120/130 lm/W • Ra50/80



220-240V • PF>0,98 • 50/60Hz • IP66
IK09 • -40°C~+50°C • SPD 10kV - rozšírená prepäťová ochrana

 
LED driver Inventronics OT DX • EDISON LEDmodul

Beam angle: Type II (Y-T2M-636 for 5050)

Smart poulicne svietidlo • objimka Zhaga dole

NTC ochrana proti prehriatiu

Príkon je nastaviteľný podľa požiadaviek
svetelno-technického projektu



Import do EU: SLOS s.r.o., Námestie L.Štúra 24, 974 05 Banská Bystrica

Tento doklad spolu s dokladom o kúpe slúži ako Záručný list

This document together with the proof of purchase serves as Letter of Warranty

Dieses Dokument dient zusammen mit dem Kaufbeleg als Garantie

SK: Štandardná záruka 2 roky.

Pre projektovú záruku zaregistrujte projekt u dodávateľa.

EN: Standard warranty 2 years.

Register the project with the supplier for the project guarantee.

DE: Standardgarantie 2 Jahre.

Registrieren Sie das Projekt beim Lieferanten für die Projektgarantie.

Pokyny pre montáž

- Svietidlo môže inštalovať len kvalifikovaná osoba – elektrikár.
- Inštalujte v súlade s platnými predpismi.
- Skontrolujte, či je elektrické napájanie vypnuté. Odpojte zdroj energie. Uistite sa, že napájanie nie je možné obnoviť náhodou.
- Určite spôsob upevnenia vhodný pre konštrukciu.
- Inštalatéri musia zabezpečiť, aby sa používali napájacie káble so správnym teplotným určením.



SK: Pred montážou svietidla si dôkladne preštudujte pokyny pre montáž. Nerozoberajte svietidlo – hrozí zásah elektrickým prúdom alebo zničenie svietidla. Za škody spôsobené nedodržaním pokynov nenesie výrobca/importér žiadnu zodpovednosť. V zmysle STN EN 60598-1 Svietidlá Časť 1 deklaruujeme, že: svetelný zdroj inštalovaný v tomto svietidle môže vymieňať iba výrobca, jeho servisný zástupca alebo rovnako kvalifikovaná osoba. Pri odovzdávaní produktu ďalším osobám, prosím, odovzdajte s produktom aj tento návod.


STREET LIGHT

IP66

IK09



 Dimension:(mm)

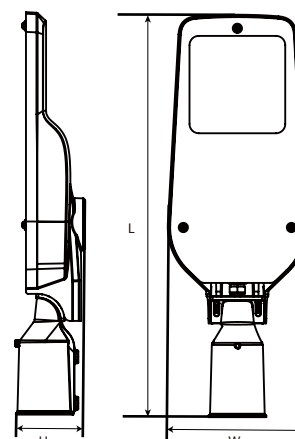

Watts(W)	L(mm)	W(mm)	H(mm)	Pole diameter(mm)
20/30/40 50/60/70	520	180	90	60
70/80/90 100/110/120	673	196	90	60

Using and Maintenance:



 
- 1.The luminaires shall be installed and maintained by qualified electrician and wired in accordance with the latest IEC electrical regulations or national requirements.
- 2.To prevent the risk of electric shock, turn off power supply before installation. It is not permitted to connect the luminaire to high-voltage AC supply line directly.
- 3.The luminaire is in accordance with EN 60598-1 and European standards.
- 4.The luminaire must be wired correctly.The input voltage and current must meet the requirements. The supplier will not be responsible for the consequences for inappropriate operation.
- 5.The light source contained in this luminaire shall only be replaced by the manufacturer or his service agent or a similar qualified person.
6. The external flexible cable or cord of this luminaire cannot be replaced; if the cord is damaged, the luminaire shall be destroyed.
7. This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

Installation Instruction

Operative instructions

1 Choose how to install the street light if with the bracket in axis (Mode 1) or perpendicular to its body (Mode 2). The bracket can be released by removing the screws that attach to the street light


2 Connect to the power line using IP66 connectors and respecting the connection diagram.



Connector
IP66




 Mode 1



Mode 2

 
3 Insert the street light to the $\phi 60\text{mm}$ pole, tightening the screws on it.

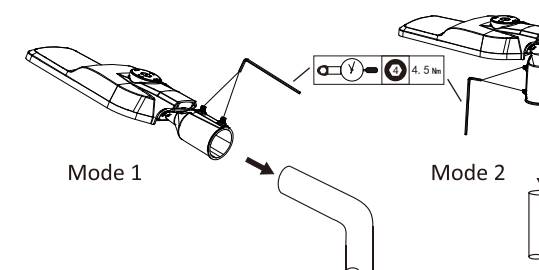

Mode 1

Mode 2

 4 After selecting the Installation Mode, you can further orient the street light by some degree by sliding the screws on the grooves. (-15°~+15°)

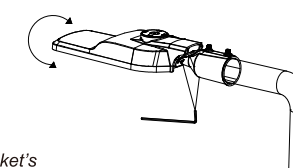

5 Finally, tighten definitively bracket's screws to ensure it to the street light.